


**ATTENTION:**  
**DO NOT USE ABRASIVE OR AMMONIA BASED CLEANERS ON THE PLASTIC MATERIAL.**

ACRYLIC or LEXAN COVER TYPE "A" ( Option # 745ACA and # 745LXA )

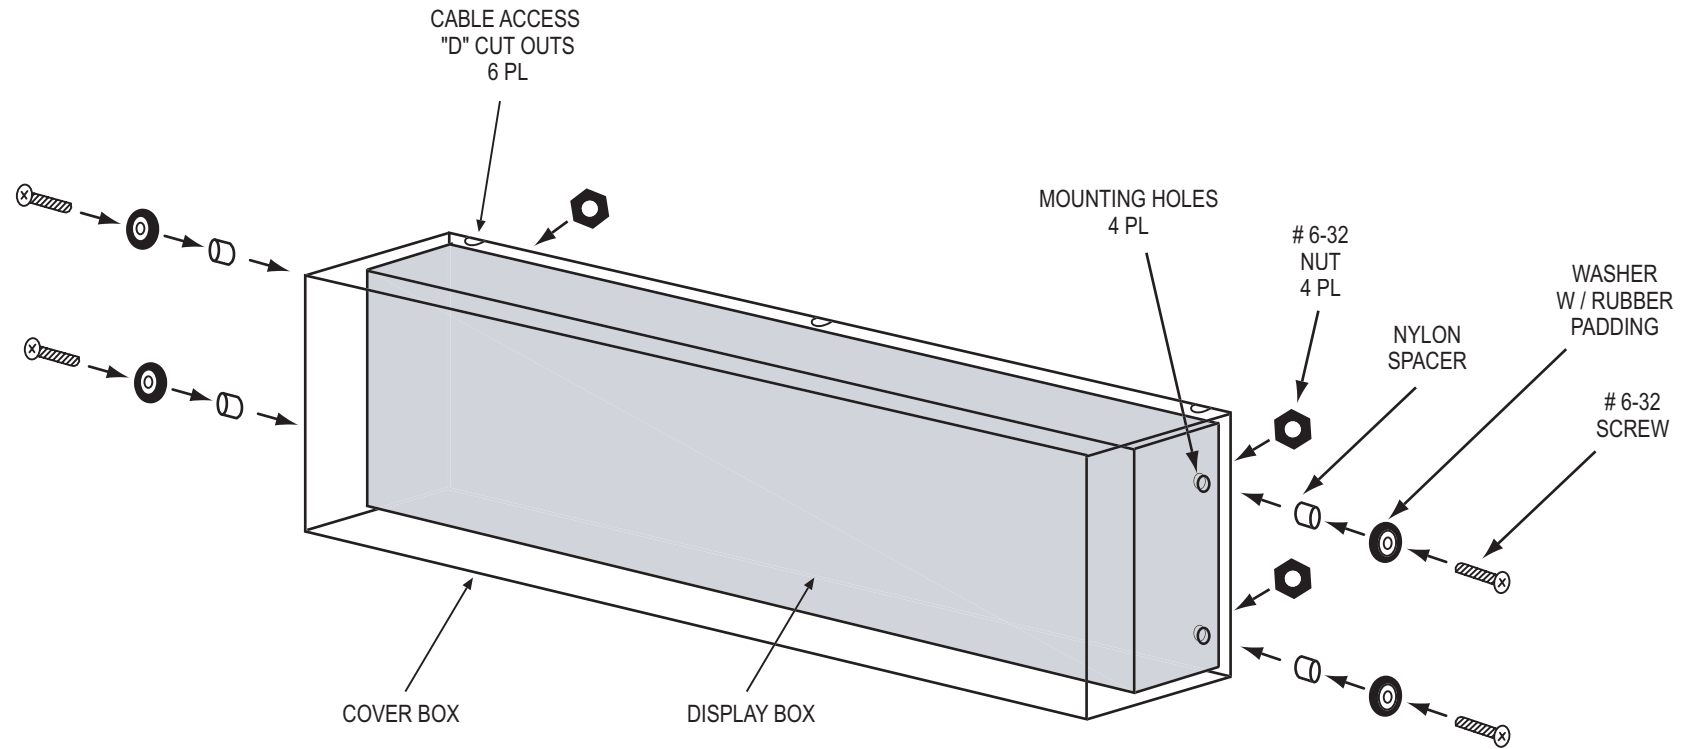

- 1) Remove protective lining from the inside and outside of the cover and clean the transparent plastic from debris.
- 2) Stand up the display and the cover on their longer sides.
- 3) Carefully slide the display into the cover.
- 4) Slide the washer over the mounting screw with the metal side facing the screw head, and insert the screw in the cover side wall upper hole.
- 5) Using tweezers or small pliers, hold the plastic spacer between the inside of the cover side and the display side wall, and insert the screw through the spacer and through the hole in the display side wall.
- 6) Install the nut on the screw on the inside of the display side wall. Do not tighten.
- 7) Repeat the above steps 4), 5) and 6) for the opposite, upper side of the display and then for the two remaining, lower installation holes.
- 8) Lift the display box slightly and tighten all nuts on the inside of the display side walls, and secure them with a second nut if necessary.

**ATTENTION:**

**DO NOT USE ABRASIVE OR AMMONIA BASED CLEANERS ON THE PLASTIC MATERIAL.**

ACRYLIC or LEXAN COVER TYPE "B" ( Option # 745ACB and # 745LXB )